

Ceiling Diffuser



Remove the ceiling diffuser by twisting anti-clockwise until the diffuser is released. 3-inch diffuser is shown above, use the same method for the 5-inch diffuser.



Using a vacuum and brush attachment, clean out any visible debris and dust in the boot.
Take note of the damper position in the boot.



Wipe out the inside of the boot with a clean cloth.
Make sure the damper in the boot is in the original position after cleaning.



Clean the ceiling diffuser, and reinstall by aligning the prongs with the boot slots, twisting it clockwise until it is in firm contact with the ceiling.

Wall Diffuser



Remove the wall diffuser by pulling it firmly away from the wall.



Using a vacuum and brush attachment, clean out any visible debris and dust.
Take note of the damper strap position in the boot.




Wipe out the inside of the boot with a clean cloth.
Make sure the damper in the boot is in the original position after cleaning.



Clean the wall diffuser, and reinstall by aligning the snap-fit prongs with the boot, then push into place until it is in firm contact with the wall.

Floor Diffuser

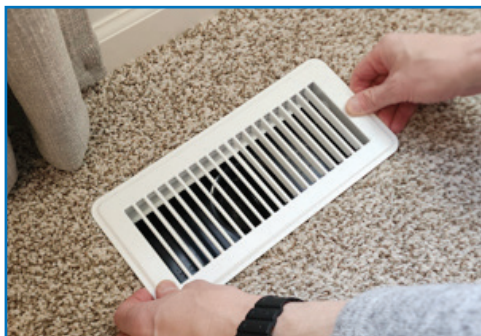

Lift up the floor diffuser to reveal the floor boot and damper underneath. There are no fasteners holding the boot in place.



Using a vacuum and brush attachment, clean out any visible debris and dust.
Take note of the damper position in the boot.



Wipe out the inside of the boot with a clean cloth.
Make sure the damper in the boot is in the original position after cleaning.



Clean the floor diffuser, and reinstall by dropping it into position, no fasteners are required.